
Vacuum

Test of vacuum tightness on PSS

Plot vacuum pressure as function of gas flow from 1sccm to 10 sccm. Vacuum pressure vs gas pressure should be a linear relationship.

Gas flow setting: 5,0 +/- 1 sccm

Gas flow	Chamber vacuum pressure (mbar)	Backing pressure	Max Chamber pressure (mbar)	Max Backing pressure (mbar)
1	2.4E-6	0.011	3,60E-06	1,30E-02
2	5.5E-6	0.01	6,10E-06	2,10E-02
3	7.6E-6	0.02	8,90E-06	2,70E-02
4	1.0E-5	0.02	1,10E-05	3,30E-02
5	1.2E-5	0.029	1,30E-05	3,90E-02
6	1.2E-5	0.039	1,50E-05	4,50E-02
7	9.0E-7	0.033	1,60E-05	4,70E-02
8	1.5E-5	0.049	1,80E-05	5,40E-02
9	1.0E-5	0.033	2,00E-05	5,90E-02
10	1.9E-5	0.047	2,20E-05	6,50E-02
OK value	Too low value		· · · · ·	

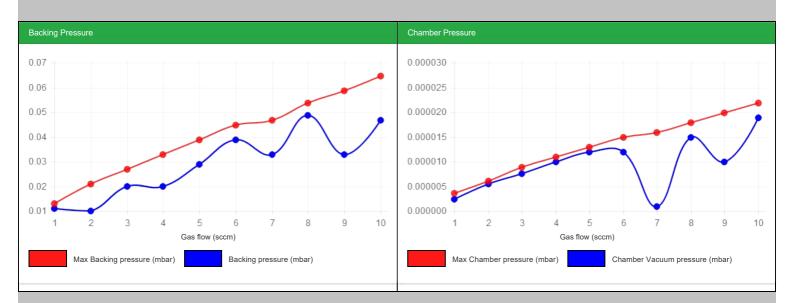

Pass critera: Linear relationship between vacuum pressure and gas flow. (Blue line should be below red line)

Vacuum leak test performed on PSS

With the vacuum system operating in pump mode with all BEV closed and without gas flow.

Set Vacuum system on VCU to Standby and observe the leak rate into the cavity (using pressure as proxy)

Time from	Vacuum pressure	Max leak rate	
Set Standby (sec)	(mbar)	Max leak rate	
0	1.4E-7	1,80E-07	
10	1.0E-6	1,00E-06	
20	1.2E-7	1,50E-06	
30	1.4E-6	1,90E-06	
40	1.8E-6	2,30E-06	
50	2.2E-6	2,70E-06	
60	1.1E-6	3,00E-06	
70	3.1E-6	3,30E-06	
80	2.9E-6	3,60E-06	
90	2.8E-6	3,90E-06	
100	3.9E-6	4,20E-06	
110	4.0E-6	4,60E-06	
120	4.4E-6	4,90E-06	



Vacuum	Switch on the water cooling to the diffusion pump					
	Press STANDBY on the VCU, record time					
	Standby time					
	Actual standby start time: 10:27					
	Verify that the green DP-lamp on the VCU lights up within 30min, re-adjust DP temp-switch as required					
	DP-lamp activation time					
	DP -lamp activated in (min): 0 Max 30min					
	Press PUMP on the VCU and note the following values:					
	Pumping down					
	Time before HVV opening 11 10-15 min					
	Actual time for HVV opening: 0 <30s					
	Actual time to reach 1.0*E-5 0					
	After reaching the vacuum value of 1.0*E-5 open the IS gas flow at 10sccm for 15 minutes					
Veeuum	WARNING! Diffusion pump may be very warm, verify that at least 2hrs has passed since pump shutdown.					
Vacuum	WARNING! Diffusion pump may be very warm, verify that at least 2ms has passed since pump shutdown. WARNING! Rotary and/or diffusion pump oil may be radioactive, verify activity level by performing an activity survey!					
	NOTE! Verify that all cables are free from interference with the diffusion pump, interference may cause cable melting and/or					
	electrical shortcut					
	Verify the oil level and the color of the rotary pump oil, re-fill or change as required, record re-filled or changed volume					
	Rotary pump oil level					
	Date of the last replacement of oil: 2022-11-07					
	Volume filled/changed (ml): 0					
	Maintenance of the diffusion pump: to be performed every 5 years					
	Last maintenance of the diffusion pump					
	Ventilate the diffusion pump by removing Pirani 1					
	NOTE! Verify that the water cooling is shut off before disconnection of the diffusion pump					
	• Remove the diffusion pump and drain the oil					
	NOTE! Measure the lenght of the Jet assy before it is disassembled. The lenght is critical to pump performance.					
	Disassemble and clean the diffusion pump					
	Replace the heater					
	Reassemble, reinstall and fill the diffusion pump with new oil					
	Diffusion pump oil replacement					
	Volume filled/changed (ml): 0					
	Verify the condition of the rotary pump oil mist filter, clean, inspect or replace as required					
	• Verify the condition of the rotary pump oil mist filter O-ring, clean, inspect for damage and/or deformation, replace as required					
	Verify the functionality of the pirani gauges and the penning gauge, clean, inspect or replace as required					
Commonte:	tect					

Comments:	test
Comments: PHOTO:	Photo name: test photo