Pre-Maintenance


Usage/Calendar based maintenance (UBM/CBM)

| | NOTE! Refer to the PETtrace Service Manual - Maintenance (direct | ction 2169049-100) for detailed instructions, apply LOTO and use PPE. |
|--------|--|---|
| Systen | n ID: | NE209962 |

Maintenance performed in accordance with instructions as outlined in the PETtrace Service Manual - Maintenance (direction 2169049-100) (signature (typed and signed)):

K

| Location | Action | Labor time (min.) | Sign. | For only optional operations note down if the operation is performed or not | | |
|----------|---|------------------------------------|-----------------------------|--|--|--|
| Vacuum | NOTE! Hydrogen gas flow should be on as for Read and record the vacuum pressure Perform a BEV leak check : open the BEV for 2 ragain the BEV, the vacuum value must not reach the | 50 | 747 | | | |
| | Vacuum pressure readout | | Gas flow(sccm): 4.0 | | | |
| | Gauge number | Pressure (x10-) without gas | Pressure (x10-) with gas | - | | |
| | A1 (4 on TCS 1001): | 3,60E-03 | 3,50E-02 | | | |
| | A2 (13 on TCS 1001): | UR | UR | | | |
| | B1 (14 on TCS 1001): | 5,30E-08 | 1,20E-05 | | | |
| | TPG parameters | | | | | |
| | | Low limit (x10-) | High limit (x10-) | | | |
| | A1: | 1,00E-01 | 7,00E-02 | | | |
| | A2: | 1,80E-05 | 7,00E-01 | | | |
| | B1: | 2,00E-01 | 3,00E-05 | | | |
| | • Press OFF on the VCU, followed by VENT, read | | | | | |
| | Vacuum VENT time | | |] | | |
| | System software | | | | | |
| | Subsytem Version | | | | | |
| | Master: ^{3,6} | | | | | |
| | ACS: 4.3.2 | | | | | |
| | Service System: 3.6.0 | | | | | |
| | Manager: TSA | | | | | |
| | Informix (only applicable to SUN- _{NA} Master Station): | | | | | |
| | VENT time: | 2022-11-06 16:13 | | | | |

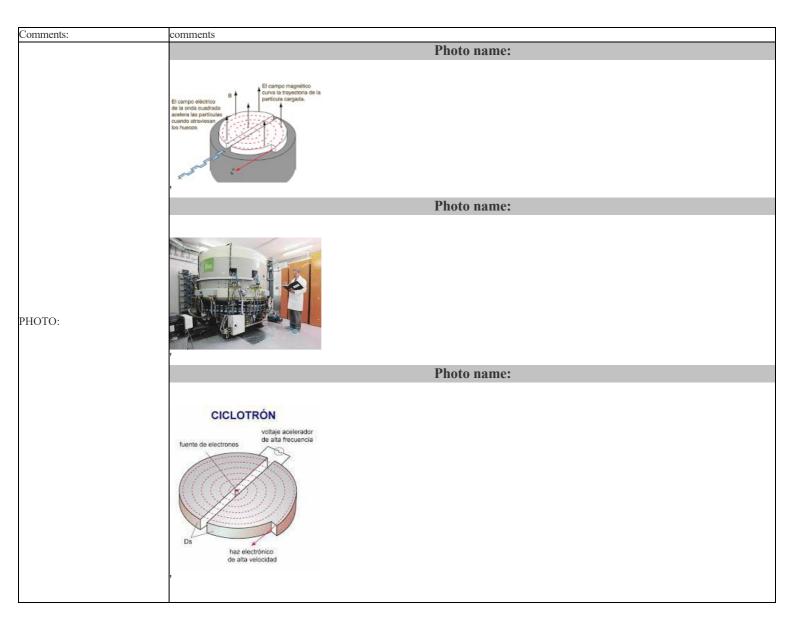


Vacuum

Test of vacuum tightness on PSS

Plot vacuum pressure as function of gas flow from 1sccm to 10 sccm. Vacuum pressure vs gas pressure should be a linear relationship.

Gas flow setting: 5,0 +/- 1 sccm

| Gas flow | Chamber vacuum pressure (mbar) | Backing pressure | Max Chamber pressure (mbar) | Max Backing pressure (mbar) |
|----------|-----------------------------------|------------------|--------------------------------|-----------------------------|
| 1 | 2.9E-6 | 0.012 | 3,60E-06 | 1,30E-02 |
| 2 | 5.4E-6 | 0.021 | 6,10E-06 | 2,10E-02 |
| 3 | 8.7E-6 | 0.027 | 8,90E-06 | 2,70E-02 |
| 4 | 1.2E-5 | 0.033 | 1,10E-05 | 3,30E-02 |
| 5 | 1.4E-5 | 0.041 | 1,30E-05 | 3,90E-02 |
| 6 | 1.6E-5 | 0.046 | 1,50E-05 | 4,50E-02 |
| 7 | 1.8E-5 | 0.051 | 1,60E-05 | 4,70E-02 |
| 8 | 2.0E-5 | 0.057 | 1,80E-05 | 5,40E-02 |
| 9 | 2.3E-5 | 0.063 | 2,00E-05 | 5,90E-02 |
| 10 | 2.6E-5 | 0.068 | 2,20E-05 | 6,50E-02 |
| OK value | Too low value | | | |

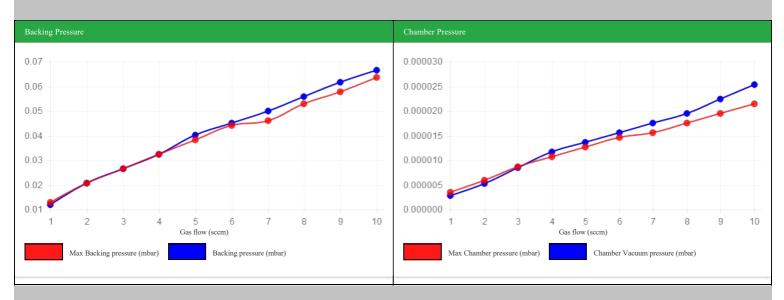

Pass critera: Linear relationship between vacuum pressure and gas flow. (Blue line should be below red line)

Vacuum leak test performed on PSS With the vacuum system operating in pump mode with all BEV closed and without gas flow.

Set Vacuum system on VCU to Standby and observe the leak rate into the cavity (using pressure as proxy)

| Time from Set Standby (sec) | Vacuum pressure (mbar) | Max leak rate |
|--------------------------------|---------------------------|---------------|
| 0 | 3.0E-8 | 1,80E-07 |
| 10 | 1.9E-7 | 1,00E-06 |
| 20 | 3.4E-7 | 1,50E-06 |
| 30 | 5.0E-7 | 1,90E-06 |
| 40 | 6.5E-7 | 2,30E-06 |
| 50 | 9.2E-7 | 2,70E-06 |
| 60 | 1.0E-6 | 3,00E-06 |
| 70 | 1.2E-6 | 3,30E-06 |
| 80 | 1.3E-6 | 3,60E-06 |
| 90 | 1.4E-6 | 3,90E-06 |
| 100 | 1.5E-6 | 4,20E-06 |
| 110 | 1.6E-6 | 4,60E-06 |
| 120 | 1.7E-6 | 4,90E-06 |



Pass critera: Time to reach 1.0E-5 mbar > 10 s (Blue line should be below red line)

| Vacuum | Switch on the water cooling to the diffusion pump | | | | | | |
|--------|--|-------------------------------|--|--|--|--|--|
| | Press STANDBY on the VCU, record time | | | | | | |
| | Standby time | | | | | | |
| | Actual standby start time: 10:27 | | | | | | |
| | • Verify that the green DP-lamp on the VCU lights up within 30min, re-adjust DP temp-switch as required | | | | | | |
| | DP-lamp activation time | | | | | | |
| | DP -lamp activated in (min): 0 Max 30min | | | | | | |
| | Press PUMP on the VCU and note the following values: | | | | | | |
| | Pumping down | | | | | | |
| | Time before HVV opening 11 10-15 min | | | | | | |
| | Actual time for HVV opening: 0 <30s | | | | | | |
| | Actual time to reach 1.0*E-5 0 | | | | | | |
| | • After reaching the vacuum value of 1.0*E-5 open the IS gas flow at 10sccm for 15 minutes | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | T | | | | | | |
| Vacuum | WARNING! Diffusion pump may be very warm, verify that at least 2hrs has passed since pump shutdown. | | | | | | |
| | WARNING! Rotary and/or diffusion pump oil may be radioactive, verify activity level by performing an activity survey! | | | | | | |
| | NOTE! Verify that all cables are free from interference with the diffusion pump, interference may cause cab | ole melting and/or electrical | | | | | |
| | shortcut Verify the oil level and the color of the rotary pump oil, re-fill or change as required, record re-filled or changed volume | | | | | | |
| | Rotary pump oil level | | | | | | |
| | | | | | | | |
| | Date of the last replacement of oil: 2022-11-07 Volume filled/changed (ml): 0 | | | | | | |
| | | | | | | | |
| | Maintenance of the diffusion pump: to be performed every 5 years | | | | | | |
| | Last maintenance of the diffusion pump Ventilate the diffusion pump by removing Pirani 1 | | | | | | |
| | NOTE! Verify that the water cooling is shut off before disconnection of the diffusion pump | | | | | | |
| | • Remove the diffusion pump and drain the oil | | | | | | |
| | NOTE! Measure the lenght of the Jet assy before it is disassembled. The lenght is critical to pump performance. | | | | | | |
| | • Disassemble and clean the diffusion pump | | | | | | |
| | • Replace the heater | | | | | | |
| | Reassemble, reinstall and fill the diffusion pump with new oil | | | | | | |
| | Diffusion pump oil replacement | | | | | | |
| | Volume filled/changed (ml): 0 | | | | | | |
| | • Verify the condition of the rotary pump oil mist filter, clean, inspect or replace as required | | | | | | |

Verify the condition of the rotary pump oil mist filter O-ring, clean, inspect or replace and/or deformation, replace as required
Verify the functionality of the pirani gauges and the penning gauge, clean, inspect or replace as required


| Comments: | |
|-----------|-------------|
| | Photo name: |
| РНОТО: | |
| | |

Chamber

| FOR There for 10 is 10 million: Survey plot There after FOR in hour : Survey plot There after FOR in hour : Probe dose rate (mSv/h) 10 20 30 40 50 60 7.0 8.0 9.0 IOC Probe dose rate (mSv/h) 1.0 2.0 3.0 4.0 5.0 8.0 9.0 IOC Probe dose rate (mSv/h) 1.0 2.0 3.0 4.0 5.0 8.0 9.0 IOC Switch off the manual baser valves to the targets on the water manifold (the large wall mounted water manifold) NOTE: 1872 Porton target system requires ARGON gas flushing X 3 before opening of connections. NOTE: 1872 Porton target system requires ARGON gas flushing X 3 before opening of connections. NOTE: 1872 Porton target system requires ARGON gas flushing X 3 before opening of connections. NOTE: 1872 Porton target system requires ARGON gas fl | Sı | urvey | | Dat | te: 2022-11-00 | 6 | | | | Time: 16:25 | | |
|---|------------|---|--|--|--|---|--|--|---|--|--|--|
| Probe dosc rate (mSv/h) 1.0 2.0 3.0 4.0 5.0 6.0 7.0 8.0 9.0 10.5 Targets - Disconnect all targets from the service PC - Switch off the manual water valves to the targets on the water manifold (the large wall mounted water manifold) NOTE: 18F2 Detector target system requires NEON gas flushing before opening of connections. NOTE: 18F2 Detector target system requires NEON gas flushing x3 before opening of connections. NOTE: 18F2 Drotto target system requires NEON gas flushing x3 before opening of connections. NOTE: 18F2 Protto target system requires NEON gas flushing x3 before opening of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k5 to proteoning of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k5 to proteoning of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k5 to proteoning of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k5 to proteoning of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k60rc opening of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k60rc opening of connections. NOTE: 18F2 Protto target system requires NEON gas flushing k60rc opening of connections.< | E | EOB | Date: 2022 | 2-11-06 | | Time: 16:25 | | Н | : | Time | after EOB in h | our : |
| Targets • Disconnect all targets from the service PC • Soutch off the manual water values to the targets on the water manifold (the large wall mounted water manifold) NOTE: 18F2 Deuteron target system requires NEON gas flushing before opening of connections. NOTE: 18F2 Deuteron target system requires NEON gas flushing before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing X3 before opening of connections. NOTE: 18F2 Proton target system requires NEON gas flushing Protone dV (N) Target of the last compressed air tubing replacement or BEV 3 years replacement for air tubing replace them, on NA | Surve | ey point | 1 | | | | | | | | | 10 |
| Switch off the manual water valves to the targets on the water manifold (the large wall mounted water manifold) NOTE! 18F2 Deuteron target system requires NEON gas flushing before opening of connections. NOTE! 18F2 Proton target system requires ARGON gas flushing X 3 before opening of connections. NOTE! Do not disconnect the C11CH4 target, any atmosphere entering this target may ruin the target. Physically disconnect all targets from the cyclotron and transport them to safe/shielded location Verify condition and functionality of the beam exit valves (BEV), repair or replace as required BEV & Compressed air Tubing: annual replacement for BEV/3 years replacement for air tubing Target position T1 T2 T3 T4 Date of the last BEV replacement: APR2019 NA NA APR2019 NA Cyclotron Verify fue hagnet | Probe dose | e rate (mSv/h) | 1.0 | 2.0 | 3.0 | 4.0 | 5.0 | 6.0 | 7.0 | 8.0 | 9.0 | 10.0 |
| • Verify condition and functionality of the beam exit valves (BEV), repair or replace as required BEV & Compressed air Tubing; annual replacement for BEV/3 years replacement for air tubing Target position T1 T2 T3 T4 Date of the last BEV replacement: APR2019 NA NA APR2019 Action Performed (V/N) N N NA APR2019 Action Performed (V/N) N NA NA APR2019 Action Performed (V/N) NA NA APR2019 Action Performed (V/N) NA NA NA APR2019 Cyclotron WARNING! Pinch hazard. • • • • • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • • • • • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • <t< th=""><th>Targets</th><th>• Switch off the NOTE! 18F2 E</th><th>manual water v Deuteron targe</th><th>valves to the ta</th><th>quires NEO</th><th>N gas flushi</th><th>ng before op</th><th>ening of con</th><th>nections</th><th>•</th><th></th><th></th></t<> | Targets | • Switch off the NOTE! 18F2 E | manual water v Deuteron targe | valves to the ta | quires NEO | N gas flushi | ng before op | ening of con | nections | • | | |
| Date of the last BEV replacement: APR2019 NA NA APR2019 Action Performed (Y/N) N N NA NA N Date of the last compressed air tubing replacement APR2019 NA NA NA NA Action Performed (Y/N) NA NA NA NA APR2019 Action Performed (Y/N) NA NA NA APR2019 Action Performed (Y/N) NA NA NA APR2019 Action Performed (Y/N) NA NA NA APR2019 Cyclotron WARNING! Pinch hazard. • • • • • NA | | | | | | · | | | uin the f | target. | | |
| Action Performed (Y/N) N N NA N Date of the last compressed air tubing replacement APR2019 NA NA APR2019 Action Performed (Y/N) NA NA NA NA NA Cyclotron WARNING! Pinch hazard. NA NA NA NA NA · Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage are if damaged replace them, otherwise put th back. • Remove the magnet door bolt, inspect for damage. If damaged repair or replace, otherwise regrease to make it prepared for installation. • Verify the magnet door functionality, the play between the yoke and the magnet, re-adjust as required, record play Yoke to magnet play | | Physically disc Verify condition BEV & Compression | connect all targe on and functiona | ets from the cy allity of the be | velotron and the | ransport then es (BEV), rep | n to safe/shield pair or replace years replace | led location as required ment for air | | - | T4 | r |
| Date of the last compressed air tubing replacement APR2019 NA NA APR2019 Action Performed (Y/N) NA NA NA NA NA NA Cyclotron WARNING! Pinch hazard. • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • Remove the magnet door bolt, inspect for damage. If damaged repair or replace, otherwise regrease to make it prepared for installation. • Verify the magnet door functionality, the play between the yoke and the magnet, re-adjust as required, record play Yoke to magnet play | | Physically disc Verify condition BEV & Compresent Target position | connect all targe on and functiona | ets from the cy allity of the be ng: annual ro | velotron and the | ransport then es (BEV), rep for BEV/ 3 y | n to safe/shield pair or replace years replace T1 | led location as required ment for air T2 | | T3 | | |
| Action Performed (V/N) NA < | | Physically disc Verify condition BEV & Compression Target position Date of the last | onnect all targe on and functiona essed air Tubin BEV replacer | ets from the cy allity of the be ng: annual ro | velotron and the | ransport then es (BEV), rep for BEV/ 3 y | n to safe/shield pair or replace years replace T1 PR2019 | led location as required ment for air T2 NA | | T3 NA | APR201 | 19 N |
| Cyclotron WARNING! Pinch hazard. • Check the screws between yoke actuator and cyclotrons chassis: remove them, inspect for damage and if damaged replace them, otherwise put th back. • Remove the magnet door bolt, inspect for damage. If damaged repair or replace, otherwise regrease to make it prepared for installation. • Verify the magnet door functionality, the play between the yoke and the magnet, re-adjust as required, record play Yoke to magnet play RF flaps • Verify flap and flap drive function, calibrate, repair and/or replace as required, read and record the current Flap motor current Recorded current (mA): 82 117 • Verify the flap to DEE play, readjust as required, read and record Flap to DEE play Flap to DEE play Flap number 0% (4mm +0,5/-0) 50% (>4 - <2mm) | | Physically disc Verify condition BEV & Compresent Target position Date of the last Action Perform | onnect all targe on and functiona essed air Tubir BEV replacer ed (Y/N) | ets from the cy allity of the be ng: annual ro ment: | velotron and the cam exit valve eplacement f | ransport then es (BEV), rep for BEV/ 3 y Al | n to safe/shield pair or replace wears replace T1 PR2019 N | led location as required ment for air T2 NA N | | T3 NA NA | APR201 N | 19 N |
| RF flaps • Verify flap and flap drive function, calibrate, repair and/or replace as required, read and record the current Flap motor current Flap 1 Recorded current (mA): 82 • Verify the flap to DEE play, readjust as required, read and record Flap to DEE play Flap number 0% (4mm +0,5/-0) 50% (>4 - <2mm) | Cyclotron | • Physically disc • Verify condition BEV & Compresent Target position Date of the last Action Perform Date of the last Action Perform | onnect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) | ets from the cy allity of the be ng: annual ro ment: | velotron and the cam exit valve eplacement f | ransport then es (BEV), rep for BEV/ 3 y Al | n to safe/shield pair or replace years replace T1 PR2019 N PR2019 | led location as required ment for air T2 NA N N NA | | T3 NA NA NA NA | APR201 N APR201 | 19 N N 19 N |
| Flap motor current Flap 1 Flap 2 Recorded current (mA): 82 117 • Verify the flap to DEE play, readjust as required, read and record Flap to DEE play Image: Control of the second | Cyclotron | Physically disc Verify condition BEV & Compresent Target position Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the mage | connect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, met door function | ets from the cy allity of the be ng: annual ro ment: hir tubing rep ke actuator an c, inspect for d onality, the pla | velotron and the cam exit valve eplacement for a second se | ransport then es (BEV), rep for BEV/ 3 y Al Al chassis: rem maged repair he yoke and t | n to safe/shield pair or replace T1 PR2019 N PR2019 NA ove them, insp or replace, oth he magnet, re- | led location as required ment for air T2 NA N NA NA Oect for damage nerwise regrea adjust as required | tubing ge and if see to main red, reco | T3 NA NA NA NA damaged replace ke it prepared for | APR201 N APR201 N them, otherwise | N 19 N N |
| Flap number 0% (4mm +0,5/-0) 50% (>4 - <2mm) | | Physically disc Verify condition BEV & Compresent Target position Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the mage Yoke to magnet | connect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, met door function play | ets from the cy allity of the be ng: annual re ment: hir tubing rep ke actuator an c, inspect for do onality, the pla | velotron and the cam exit valve eplacement in the cyclotrons and cyclotrons are an according to the cyclotrons are an according to the cyclotrons are an according to the cyclotron of the cyclot | ransport then es (BEV), rep for BEV/ 3 y Al Al chassis: rem maged repair ne yoke and the maged repair | n to safe/shield pair or replace of years replace T1 PR2019 N PR2019 NA ove them, insp or replace, off he magnet, re- | led location as required ment for air T2 NA NA NA NA oect for damage nerwise regrea adjust as required | tubing ge and if se to ma red, reco | T3 NA NA NA damaged replace ke it prepared for rd play | APR201 N APR201 N them, otherwise | 19 N N 19 N N |
| Flap number 0% (4mm +0,5/-0) 50% (>4 - <2mm) 100% (>26mm) Working Position | | Physically disc Verify condition BEV & Compre- Target position Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the magnet Voke to magnet Verify flap and Flap motor curr | eonnect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, net door function play I flap drive function rent | ets from the cy allity of the be ng: annual re ment: hir tubing rep ke actuator an c, inspect for d. onality, the pla Recor ction, calibrate | relotron and the earner exit valves eplacement of eplacement of explorement of ex | ransport then es (BEV), rep for BEV/3 y Al Al chassis: rem maged repair te yoke and the maj: or replace as | n to safe/shield pair or replace T1 PR2019 NA ove them, insp or replace, oth he magnet, re- 5 required, read | led location as required ment for air T2 NA NA NA NA oect for damage nerwise regreat adjust as required Limit 2-10m and record the Flap 2 | tubing ge and if se to mai red, reco | T3 NA NA NA damaged replace ke it prepared for rd play | APR201 N APR201 N them, otherwise | 19 1 1 19 1 1 |
| | | Physically disc Verify condition BEV & Compression Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the magnet Verify flap and Flap motor curr Verify the flap | eonnect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, met door function play d flap drive function rent to DEE play, received | ets from the cy allity of the be ng: annual re ment: hir tubing rep ke actuator an c, inspect for d. onality, the pla Recor ction, calibrate | relotron and the earner exit valves eplacement of eplacement of explorement of ex | ransport then es (BEV), rep for BEV/3 y Al Al chassis: rem maged repair te yoke and the maj: or replace as | n to safe/shield pair or replace T1 PR2019 NA ove them, insp or replace, oth he magnet, re- 5 required, read | led location as required ment for air T2 NA NA NA NA oect for damage nerwise regreat adjust as required Limit 2-10m and record the Flap 2 | tubing ge and if se to mai red, reco | T3 NA NA NA damaged replace ke it prepared for rd play | APR201 N APR201 N them, otherwise | 19 1 1 19 1 1 |
| 1: 4.34 11.72 34.32 NA | | Physically disc Verify condition BEV & Compression Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the magnet Verify flap and Flap motor curr Verify the flap | eonnect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, met door function play d flap drive function rent to DEE play, re- | ets from the cy allity of the be ng: annual ro ment: iir tubing rep ke actuator an c, inspect for da onality, the pla Recor ction, calibrate Recorded eadjust as requ | relotron and the earner exit valves eplacement of eplacement of explorement of ex | ransport then es (BEV), rep for BEV/3 y Al Al chassis: rem maged repair ne yoke and the maged repair ne yoke and the more replace as as a l a l a l chassis: rem | n to safe/shield pair or replace a years replace T1 PR2019 N PR2019 NA ove them, insp or replace, oth he magnet, re- 5 required, read Flap 1 82 | led location as required ment for air T2 NA N NA NA Dect for damage nerwise regreat adjust as required Limit 2-10m and record the Flap 2 117 | tubing ge and if ise to mai red, reco | T3 NA NA NA NA damaged replace ke it prepared for rd play | APR201 N APR201 N them, otherwiss installation. | 19 1 19 1 19 1 1 e put the |
| 2: 4.84 11.82 31 NA | | Physically disc Verify condition BEV & Compression Date of the last Action Perform Date of the last Action Perform WARNING! Pir Check the scree back. Remove the m Verify the magnet Verify flap and Flap motor curr Verify the flap | eonnect all targe on and functiona essed air Tubin BEV replacer ed (Y/N) compressed a ed (Y/N) nch hazard. ws between yol agnet door bolt, met door function play d flap drive function rent to DEE play, re- | ets from the cy allity of the be ng: annual ro ment: iir tubing rep ke actuator an c, inspect for da onality, the pla Recor ction, calibrate Recorded eadjust as requ | relotron and the earner exit valves eplacement of eplacement of explorement of ex | ransport then es (BEV), rep for BEV/3 y Al Al chassis: rem maged repair ne yoke and the maged repair ne | n to safe/shield pair or replace a years replace T1 PR2019 N PR2019 NA ove them, insp or replace, oth he magnet, re- 5 required, read Flap 1 82 mm +0,5/-0) | led location as required ment for air T2 NA N NA NA Dect for damag nerwise regrea adjust as required Limit 2-10m and record the Flap 2 117 | tubing ge and if ise to mai red, reco | T3 NA NA NA NA damaged replace ke it prepared for rd play | APR201 N APR201 N them, otherwise installation. | 19 1 19 1 19 1 1 e put the |

| Central region | • Verify the DEE tip conditi | · • | | | | | | |
|----------------|--|----------------------------|---------------------------|---|---|--------------------------------|--|--|
| | NOTE! Ion-Source main | tenance may require | paper burn to v | equires maintenance and verify beam position in ta bly (ion source 'block' with | rget. | -read and record the adjustmen | | |
| | Ion source adjustment (w | ith dummy anode) | | | | | | |
| | Location | Recorded distance | Typically (mm) | | | | | |
| | | <u>After</u> 0.45 | 0.9-1.2 | | | | | |
| | A: B: | 0.43 | 0,9-1,2 | | | | | |
| | C: | 0.4 | 0,4-0,6 | | | | | |
| | D: | 0.75 | 1,1-1,3 | | | | | |
| | Verify flip-in probe condi | tion, position, insulation | and functionality | , reposition and/or replace a | is required, read and record | 1 | | |
| | Flip-in probe insulator su | rface reading | | | | | | |
| | Recorded reading (kΩ): | 29.5 | Typically 29,4kΩ | | | | | |
| | • Read and record DEE set | | | l factory settings, if adjuste | ed re-read and record | | | |
| | DEE settings | | | | | | | |
| | Measurement point | Height (mm) | Thickness (mm) | Theoretical midplane from pole (mm) | Actual midplane from pole (mm) | Variance (max 0,5mm) | | |
| | Dee1 tip top (A): | 46.20 | 33.20 | 30 | 29.6 | 0.4 | | |
| | Dee1 upper corner (B): | 74.10 | 33.10 | 58 | 57.55 | 0.45 | | |
| | Dee1 lower corner (C): | 47.10 | 33.50 | 30 | 30.35 | -0.35 | | |
| | Dee1 tip lower (D): | 46.40 | 33 | 30 | 29.7 | 0.3 | | |
| | Dee2 lower tip (E): Dee2 lower corner (F): | 74.30 47.10 | 33.40 33.80 | <u>58</u> 30 | 57.6 30.2 | 0.4 | | |
| | Dee2 upper corner (G): | 74.90 | 33.20 | 58 | 58.3 | -0.2 | | |
| | Dee2 upper corner (G). Dee2 upper tip (H): | 75.00 | 33.50 | 58 | 58.25 | -0.25 | | |
| | Stem 1 (I) | 100.50 | NA | | 00.20 | 0.20 | | |
| | Stem 1 connecting block (J) | 102.00 | NA | | | | | |
| | Stem 2 (K) | 101.00 | NA | | | | | |
| | Stem 2 connecting block (L) | 102.00 | NA | | | | | |
| | NOTE! Do not touch or clean the DEE pick ups. | | | | | | | |
| | • Verify thightness of the I | DEE and the stem screw | vs, re-tighten if re | quired | | | | |
| traction | Verify foil condition, in case of >3 broken foils; replace the carousel and transport the replaced unit to a safe/shielded location for decay Verify functionality and status of the limit switches, repair and/or replace as required | | | | | | | |
| | Verify capton cable condition, repair and/or replace as required | | | | | | | |
| | Verify carousel turn mechanism functionality, repair and/or replace as required Verify that the carousel insulation, repair and/or replace as required, read and record resistance | | | | | | | |
| | Carousel insulation (grou | ind resistance) | | | | | | |
| | Recorded resistance ext | raction 1 (carousel to | o carrier) ($k\Omega$): | 29.4 | Typically 29.4kΩ | | | |
| | Recorded resistance extraction 2 (carousel to carrier) (kΩ): 29.45 Typically 29.4kΩ | | | | | | | |
| | Recorded resistance extraction 1 (cable to carrier) ($k\Omega$):0>500 $k\Omega$ Recorded resistance extraction 2 (cable to carrier) ($k\Omega$):0>500 $k\Omega$ | | | | | | | |
| | | | | 0 tionality, repair and/or repla | >500kΩ ace as required, calibrate, r | ead and record the motor curr | | |
| | Extraction and balance m | otor current | | | | | | |
| | | recorded current ext | raction 1 (mA): | 142 | Limit 50-200 mA | | | |
| | | recorded current ext | \ / | 101 | Limit 50-200 mA | | | |
| | Maxin | num recorded curren | t balance (mA): | 120 | Limit 100-300mA | | | |

| | Collimator readings | | | | | | |
|---|---|---|--|---------------------------------|--|--|--|
| | Collimator position Insu 1 (lower) | <u>llation (recorded ground resistance) (typically 29,4kΩ)</u> 29.46 | Horizontal opening (mm) | Vertical opening (mm) 10 | | | |
| | 1 (lower) | 29.48 | 0 | 0 | | | |
| | 2/3 | 0 | 0 | 0 | | | |
| | 3/4 | 29.46 | 0 | 0 | | | |
| | 4/5 | 0 | 0 | 0 | | | |
| | 5/6 6 (upper) | 0 | 0 | 0 0 | | | |
| | | tion, repair and/or replace as required, read and record insulat | | 0 | | | |
| | Target clamps insulation (| ground resistance) | | | | | |
| | Target clamp position | Recorded resistance (typically 20,4k Ω) | | | | | |
| | T1 | 0 | | | | | |
| | T2 | 0 | | | | | |
| | T3 | 0 | | | | | |
| | T4 T5 | 0 | | | | | |
| | T5 | 0 | | | | | |
| ink | document by photoVerify that no damage, conVerify that the finger cont | rrned, covered by aluminum oxide (sputtered), foreign materia ntamination and/or deformation are present on the vacuum tar acts are properly secured in place and that no damage and/or o | nk o-ring, replace as required deformation are present, rein | l, otherwise clean and regrease | | | |
| | | les are properly fitted and tightly secured at their locations and plate and the screws for the covers at the top right inside of the place | | | | | |
| ater cooling | • Switch on the secondary w | vater cooling (Swedewater), let it run for at least 10 minutes, v | erify normal operation | | | | |
| Ĩ | • Verify that no leaks are present on the water manifold (target panel), the magnet connections, the RF system, the ion-source system, the PSMC, repa and/or replace as required | | | | | | |
| | • Verify the condition of the water cooling lines for the targets, if hard or brittle, replace as required | | | | | | |
| | • Turn off the main water cooling pump on the secondary water cooling system (Swedewater) (optional: perform only in case of cooling problems) | | | | | | |
| | | | | | | | |
| | • Inspect and replace filter ' | | | in case of cooling problems) | | | |
| | | Z2 at the Swedewater (optional: perform only in case of coolir | ng problems) | in case of cooling problems) | | | |
| | • Inspect and clean filter Z1 | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of | ig problems) cooling problems) | | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred | ng problems) cooling problems) d/occurrs during production, | | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of | ng problems) cooling problems) d/occurrs during production, | | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as rea ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature alarm (degree C): Cooling water out temperature BT2 (degree C): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| argets | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature alarm (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (µS cm-1): | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| argets | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s On mode: Verify water cooling s Secondary water cool | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT3 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1): al operation) water cooling tubes, if hard or brittle, replace as required | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| nnual | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT3 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1): al operation) water cooling tubes, if hard or brittle, replace as required | ng problems) cooling problems) d/occurrs during production, quired, read and record | replace the ion exchanger resir | | | |
| nnual aintenance: | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT3 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1): al operation) water cooling tubes, if hard or brittle, replace as required | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resir | | | |
| nnual aintenance: heck of the | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check s | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1): al operation) water cooling tubes, if hard or brittle, replace as required to be done: the swedewater pump and then turn off the power of the PDU | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resin | | | |
| nnual aintenance: heck of the DU terminal | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s On mode: Verify water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check s If Vacuum still OFF, stop Put the gloves and helmet | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature alarm (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1); al operation) water cooling tubes, if hard or brittle, replace as required to be done: the swedewater pump and then turn off the power of the PDU for electrical interventions | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resin | | | |
| nnual aintenance: heck of the DU terminal crews | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s On mode: Verify water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check to If Vacuum still OFF, stop Put the gloves and helmet Check and if needed tigthe | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (μS cm-1); al operation) water cooling tubes, if hard or brittle, replace as required to be done: the swedewater pump and then turn off the power of the PDU for electrical interventions en the terminal screws inside the PDU | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resir | | | |
| nnual aintenance: heck of the DU terminal crews nd of inside- | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s Secondary water cooling s On mode: Verify water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check s If Vacuum still OFF, stop Put the gloves and helmet Check and if needed tigthe Install the paper burn target | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (µS cm-1); al operation) water cooling tubes, if hard or brittle, replace as required to be done: the swedewater pump and then turn off the power of the PDU for electrical interventions en the terminal screws inside the PDU et | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resir | | | |
| argets nnual aaintenance: heck of the DU terminal crews nd of inside- unker perations | Inspect and clean filter Z1 Verify water conductivity (normally once a year) Off mode: Verify water le Secondary water cooling s On mode: Verify water cooling s On mode: Verify water cooling s Replace LTF peek (Option Verify the condition of the For the PDU, yearly check to If Vacuum still OFF, stop Put the gloves and helmet Check and if needed tigthe | Z2 at the Swedewater (optional: perform only in case of coolir and Z3 at the Swedewater (optional: perform only in case of and flow at the Swedewater, if conductivity error has occurred vel and pressure at the Swedewater, re-fill and/or adjust as red ystem (Swedewater) system off data Water volume filled (ml): Static pressure compressed air (kPa): oling system readings, adjust as required, read and record ystem (Swedewater), system on data Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): Vacuum cooling pump BP3 (bar) (if present): System temperature BT1 (degree C): Temperature BT1 (degree C): Cooling water out temperature BT2 (degree C): Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): Conductivity BQ1 (µS cm-1); al operation) water cooling tubes, if hard or brittle, replace as required to be done: the swedewater pump and then turn off the power of the PDU for electrical interventions en the terminal screws inside the PDU et | g problems) cooling problems) d/occurrs during production, quired, read and record 0 | replace the ion exchanger resir | | | |

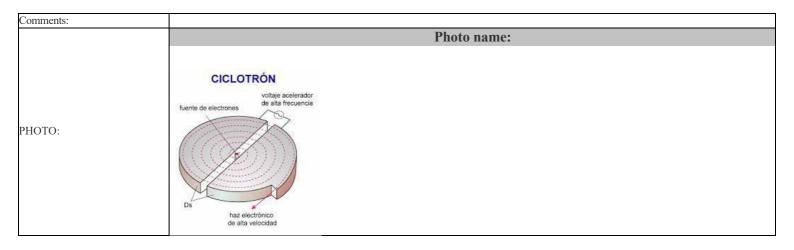

Beam

| Beam | Perform a paper burn test in DB for both targets | | | | | | | |
|------|---|--|------------------------------------|--|--|--|--|--|
| | • Dismount the paper burn targets and put the standard targets in pl | | | | | | | |
| | • Check the He flow inside flowmeters fot both target in SB and DB and close the bunker | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | • At the Service System: Connect targets and verify target vacuum | tightness, repair and/or replace as required | | | | | | |
| | • At the Service System: Select FILL TARGET (for F18 target sele | ect: O16 water) and verify the fill volume verify that | t the target pressure increases in | | | | | |
| | accordance with the specification for the specific target type, adjust | t, repair and/or replace as required | | | | | | |
| | Verify that the vault door are closed Connect the Service System to the ACU and power up the Servic | a System, set the master to local and log in to the S | arriaa System | | | | | |
| | NOTE! Only Service System: BEAM CONTROL and TARG | | ervice System | | | | | |
| | • Start the water cooling, verify vacuum system status at the VCU, | | | | | | | |
| | • Set RF to STANDBY, select target and set the extraction foil to the | | foil | | | | | |
| | • Set the flip-in probe to: IN, select H- particle, set RF to NORMAI | | | | | | | |
| | • Verify Ion-source gas, turn on the Ion-source and set to 50mA, ver | | to OUT | | | | | |
| | NOTE! Maximum collimator and tuning (extraction foil curr • Read and record the target, the foil, the collimator current, adjust the | | hieved | | | | | |
| | • Adjust the magnet current, the RF DEE voltage, the RF delta DEF | | | | | | | |
| | | 6, 6 | 1 | | | | | |
| | Beam performance | | | | | | | |
| | Beam performance | H- | | | | | | |
| | Magnet current (A): | 430 | | | | | | |
| | DEE voltage : | 34 | | | | | | |
| | Delta Dee Voltage | 1 | | | | | | |
| | Ion source current (mA): | 98 | | | | | | |
| | Ion source voltage (kV): | 1012 | | | | | | |
| | Gas flow (sccm): | 4 | | | | | | |
| | Flip-in probe current (IFLIP (μA)): | | | | | | | |
| | Target 1 position/type: | 98.3 | | | | | | |
| | Target 2 position/type: Foil 1 current | 98,3 | | | | | | |
| | Foil 2 current | 31,6 | | | | | | |
| | Collimator lower 1 current | 1.6 | | | | | | |
| | Target 1 current | 12,79% | | | | | | |
| | Collimator upper 1 current | 16,99% | | | | | | |
| | Collimator lower 2 current | | | | | | | |
| | Target 2 current | | | | | | | |
| | Collimator upper 2 current | | | | | | | |
| | Target 1 beam width (Col lower+Col upper / Itarget in%) | | | | | | | |
| | Target 2 beam width (Col lower+Col upper / Itarget in%) | | | | | | | |
| | Extraction foil current (IEXT (µA)): | | | | | | | |
| | Transmission Target 1 = ITAR/Ifoil | | | | | | | |
| | Transmission Target 2 = ITAR/Ifoil | | | | | | | |
| | Acceleration Efficiency = Ifoil/Iprobe (H > 60%) ISEFFICIENCY=IFLIP/IARC (H- >0.20, D- >0.10) | | | | | | | |
| | (μA/mA): | | | | | | | |
| | Water cooling system (Swedewater), with beam-on | | | | | | | |
| | | | | | | | | |
| | Expansion vessel BP1 (bar): Main pump pressure BP2 (bar): | | | | | | | |
| | Vacuum cooling pump BP3 (bar): | | | | | | | |
| | System temperature BT1 (degree C): | | | | | | | |
| | Cooling water out temperature BT2 (degree C): | | | | | | | |
| | | | | | | | | |
| | Cooling water in temperature BT3 (degree C): Deonizer flow BF10 (liter/min): | | | | | | | |
| | Conductivity BQ1 (µS cm-1): | | | | | | | |
| | Water cooling system (Swedewater), with beam-on | | | | | | | |
| | External temperature | | | | | | | |
| | | Valve position | | | | | | |
| | Cyclotron in standby condition | · · · · · · · · · · · · · · · · · · · | | | | | | |
| | After 1 hour of irradiation | | | | | | | |
| | After 2 hour of irradiation | | | | | | | |

