
Vacuum

Test of vacuum tightness on PSS

Plot vacuum pressure as function of gas flow from 1sccm to 10 sccm. Vacuum pressure vs gas pressure should be a linear relationship.

Gas flow setting: 5,0 +/- 1 sccm

| Gas flow | Chamber vacuum pressure (mbar) | Backing pressure | Max Chamber pressure (mbar) | Max Backing pressure (mbar) |
|----------|-----------------------------------|------------------|--------------------------------|-----------------------------|
| 1 | 2.9E-6 | 0.012 | 3,60E-06 | 1,30E-02 |
| 2 | 5.4E-6 | 0.021 | 6,10E-06 | 2,10E-02 |
| 3 | 8.7E-6 | 0.027 | 8,90E-06 | 2,70E-02 |
| 4 | 1.2E-5 | 0.033 | 1,10E-05 | 3,30E-02 |
| 5 | 1.4E-5 | 0.041 | 1,30E-05 | 3,90E-02 |
| 6 | 1.6E-5 | 0.046 | 1,50E-05 | 4,50E-02 |
| 7 | 1.8E-5 | 0.051 | 1,60E-05 | 4,70E-02 |
| 8 | 2.0E-5 | 0.057 | 1,80E-05 | 5,40E-02 |
| 9 | 2.3E-5 | 0.063 | 2,00E-05 | 5,90E-02 |
| 10 | 2.6E-5 | 0.068 | 2,20E-05 | 6,50E-02 |
| OK value | Too low value | | | |

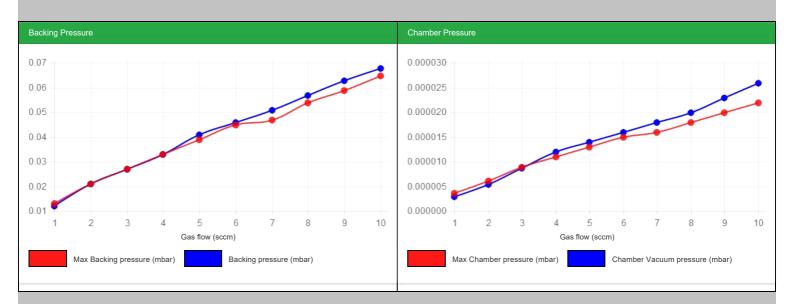

Pass critera: Linear relationship between vacuum pressure and gas flow. (Blue line should be below red line)

Vacuum leak test performed on PSS

With the vacuum system operating in pump mode with all BEV closed and without gas flow.

Set Vacuum system on VCU to Standby and observe the leak rate into the cavity (using pressure as proxy)

| Time from | Vacuum pressure | Max leak rate |
|-------------------|-----------------|---------------|
| Set Standby (sec) | (mbar) | |
| 0 | 3.0E-8 | 1,80E-07 |
| 10 | 1.9E-7 | 1,00E-06 |
| 20 | 3.4E-7 | 1,50E-06 |
| 30 | 5.0E-7 | 1,90E-06 |
| 40 | 6.5E-7 | 2,30E-06 |
| 50 | 9.2E-7 | 2,70E-06 |
| 60 | 1.0E-6 | 3,00E-06 |
| 70 | 1.2E-6 | 3,30E-06 |
| 80 | 1.3E-6 | 3,60E-06 |
| 90 | 1.4E-6 | 3,90E-06 |
| 100 | 1.5E-6 | 4,20E-06 |
| 110 | 1.6E-6 | 4,60E-06 |
| 120 | 1.7E-6 | 4,90E-06 |



Pass critera: Time to reach 1.0E-5 mbar > 10 s (Blue line should be below red line)

| | Press STANDBY on the VCU, record time | Switch on the water cooling to the diffusion pump | | | | | |
|--------|---|--|-------------------|--|--|--|--|
| | Press STANDBY on the VCU, record time Standby time | | | | | | |
| | | | | | | | |
| | Actual standby start time: 10:27 • Verify that the green DP-lamp on the VCU lights up within 30min, re-adjust DP temp-switch as required | | | | | | |
| | Verify that the green DP-lamp on the VCO lights up within 30min, re-adjust DP temp-switch as required DP-lamp activation time | | | | | | |
| | | Max 30min | | | | | |
| | Press PUMP on the VCU and note the following values: | | | | | | |
| | Pumping down | | | | | | |
| | Time before HVV opening 11 | 10-15 min | | | | | |
| | Actual time for HVV opening: 0 | <30s | | | | | |
| | Actual time to reach 1.0*E-5 0 | | | | | | |
| | • After reaching the vacuum value of 1.0*E-5 open the IS gas flow at 10sccm for | or 15 minutes | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| Vacuum | WARNING! Diffusion pump may be very warm, verify that at least 2hrs has | s passed since nump shutdown | | | | | |
| vacuum | WARNING! Buildson pump may be very warm, very that a least 2ms has passed since pump shatdown. WARNING! Rotary and/or diffusion pump oil may be radioactive, verify activity level by performing an activity survey! | | | | | | |
| | NOTE! Verify that all cables are free from interference with the diffusion p | | | | | | |
| | electrical shortcut | | ouble menning una | | | | |
| | Verify the oil level and the color of the rotary pump oil, re-fill or change as required, record re-filled or changed volume | | | | | | |
| | | anda, recercine finica er enlangea v | James | | | | |
| | Rotary pump oil level | | | | | | |
| | Rotary pump oil level Date of the last replacement of oil: 20 | 022-11-07 | | | | | |
| | Date of the last replacement of oil: 20 | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 20 Last maintenance of the diffusion pump 20 | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 20 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 1 | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 0 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 0 NOTE! Verify that the water cooling is shut off before disconnection of the diffusion of the diffusion pump 0 | | | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 0 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 0 NOTE! Verify that the water cooling is shut off before disconnection of the 0 • Remove the diffusion pump and drain the oil 0 | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 0 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 0 NOTE! Verify that the water cooling is shut off before disconnection of the 0 NOTE! Measure the lenght of the Jet assy before it is disassembled. The 0 | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 20 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 0 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 0 NOTE! Verify that the water cooling is shut off before disconnection of the 0 • Remove the diffusion pump and drain the oil 0 | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 24 Last maintenance of the diffusion pump 9 Ventilate the diffusion pump by removing Pirani 1 1 NOTE! Verify that the water cooling is shut off before disconnection of the 6 NOTE! Measure the lenght of the Jet assy before it is disassembled. The 9 Disassemble and clean the diffusion pump 1 | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years Last maintenance of the diffusion pump Ventilate the diffusion pump by removing Pirani 1 NOTE! Verify that the water cooling is shut off before disconnection of th NOTE! Verify that the water cooling is shut off before disconnection of th Pisassemble and clean the diffusion pump NOTE! Measure the lenght of the Jet assy before it is disassembled. The Disassemble and clean the diffusion pump Replace the heater Replace the heater | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 1 Last maintenance of the diffusion pump Ventilate the diffusion pump by removing Pirani 1 NOTE! Verify that the water cooling is shut off before disconnection of the NOTE! Verify that the user cooling is shut off before disconnection of the NOTE! Measure the lenght of the Jet assy before it is disassembled. The Disassemble and clean the diffusion pump Replace the heater Reassemble, reinstall and fill the diffusion pump with new oil | ne diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years 0 Last maintenance of the diffusion pump 0 Ventilate the diffusion pump by removing Pirani 1 0 NOTE! Verify that the water cooling is shut off before disconnection of the 0 Remove the diffusion pump and drain the oil 0 NOTE! Measure the lenght of the Jet assy before it is disassembled. The 0 • Disassemble and clean the diffusion pump 0 • Replace the heater 0 • Reassemble, reinstall and fill the diffusion pump with new oil 0 Diffusion pump oil replacement 0 | e diffusion pump | ormance. | | | | |
| | Date of the last replacement of oil: 24 Volume filled/changed (ml): 0 Maintenance of the diffusion pump: to be performed every 5 years Last maintenance of the diffusion pump Ventilate the diffusion pump by removing Pirani 1 NOTE! Verify that the water cooling is shut off before disconnection of th • Remove the diffusion pump and drain the oil NOTE! Measure the lenght of the Jet assy before it is disassembled. The • Disassemble and clean the diffusion pump • Replace the heater • Reassemble, reinstall and fill the diffusion pump with new oil • Diffusion pump oil replacement Volume filled/changed (ml): | e diffusion pump e lenght is critical to pump perfo | | | | | |

| Comments: | |
|-----------|-------------|
| | Photo name: |
| PHOTO: | |